


Interior and Exterior Wall Assembly

Brickweb Over CMU or Concrete Wall

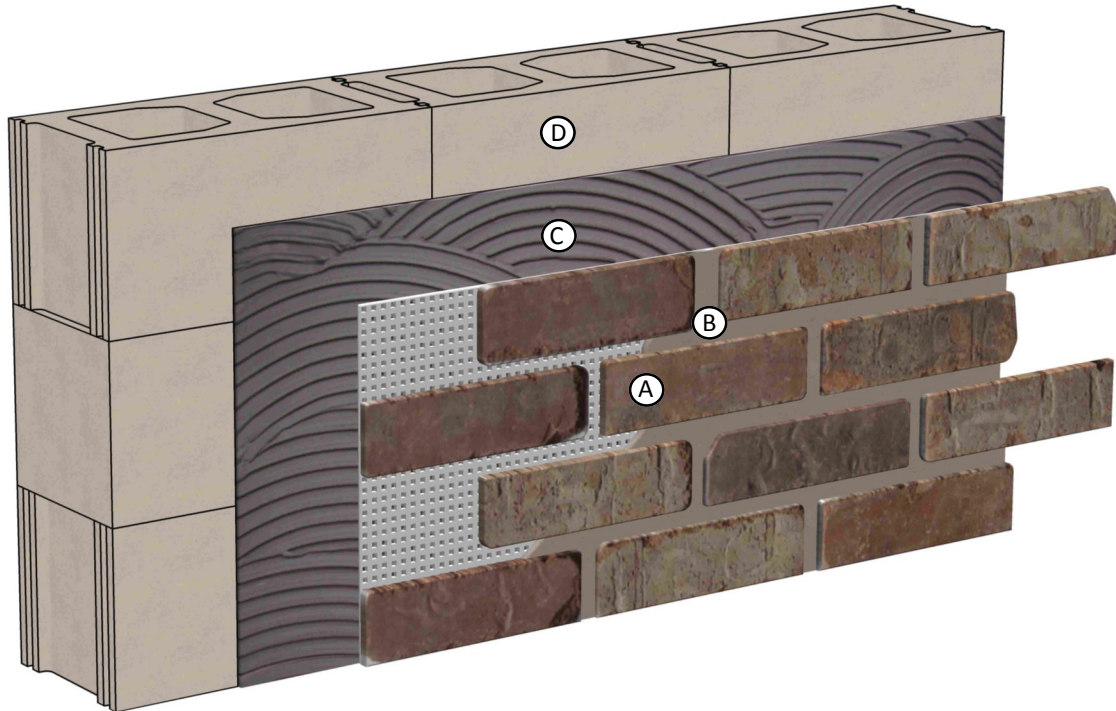

- A - Brickweb Thin Brick Sheet:** Choose from a variety of color blends. Simply apply brickweb corners and flats by firmly pressing the brickweb into the adhesive. The adhesive should penetrate through the mesh to adhere to brick. Apply sheets by overlapping brick over the exposed webbing.
- B - Mortar:** Use grout bag and type S mortar mix or a sponge and tile grout to finish the areas between the bricks. Many different joint styles are available.
- C - Old Mill Adhesive:** To adhere brickweb sheets to the cement or CMU wall, apply adhesive to the wall using a 3/8" notched trowel. Only apply adhesive in a manageable area. Follow all manufacturer's instructions.
- D - CMU Block or Concrete:** Block or concrete must be clean, flat, free from form oil and structurally sound to receive adhesive and brickweb.

Prior to installation, check all local building codes and regulations.

To learn more about installation or to watch how-to videos, visit our website.



www.oldmillbrick.com

Brickweb is a patented product of Old Mill Brick

www.installbrickweb.com