


Interior Floor Assembly

Brickweb Over Wood Flooring

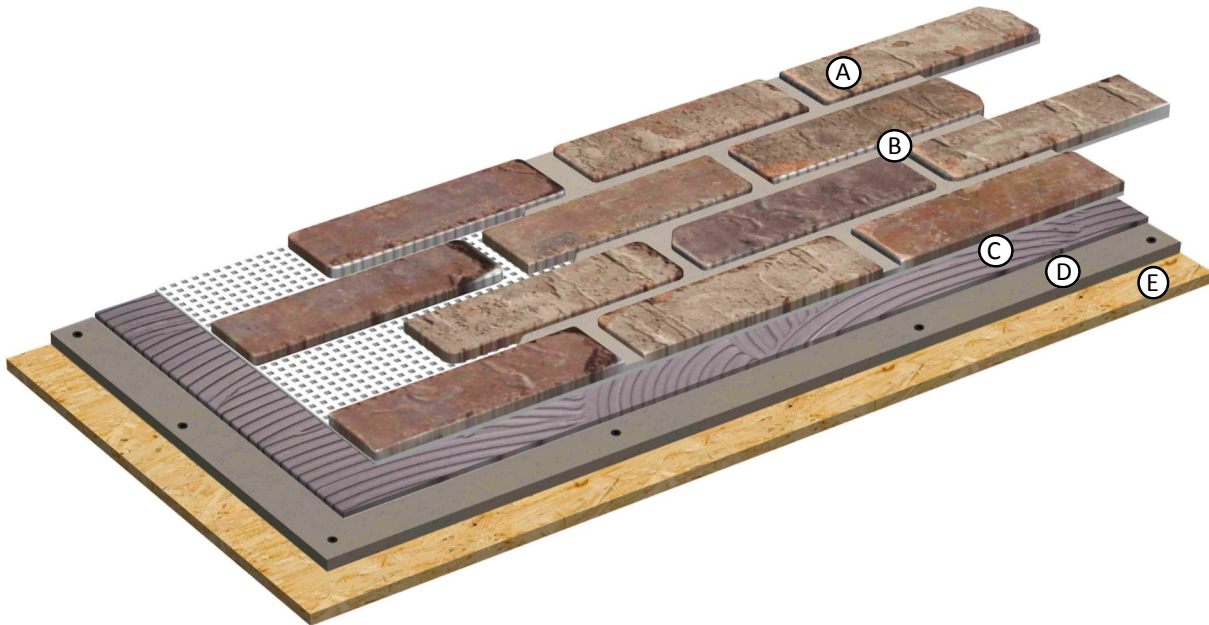

- A - Brickweb Thin Brick Sheet:** Choose from a variety of color blends. Simply apply brickweb sheets by firmly pressing the brickweb into the adhesive. The adhesive should penetrate through the mesh to adhere to brick. Apply sheets by overlapping brick over the exposed webbing. Start installation at farthest wall filling in towards the exit. Do not stand or walk on new brick floor for 24 hours.
- B - Grout:** Use a sponge and tile grout to finish the areas between the bricks. Many different joint styles are available.
- C - Old Mill Adhesive:** To adhere brickweb sheets to the cement board, apply adhesive to the cement board using a 3/8" notched trowel. Only apply adhesive in a manageable area. Follow all manufacturer's instructions.
- D - Cement Board:** 1/2" cement board, making sure it is secured down without flex or movement.
- E - Wood Sub-Flooring:** Make sure it is sound and firm without flex.

Prior to installation, check all local building codes and regulations.

To learn more about installation or to watch how to-videos, visit our website.



www.oldmillbrick.com

Brickweb is a patented product of Old Mill Brick

www.installbrickweb.com